


Hygienic assembly and maintenance – CANEO series10

A	Lock nut
B	Seal
C	Connection M12
D	SENSORswitch

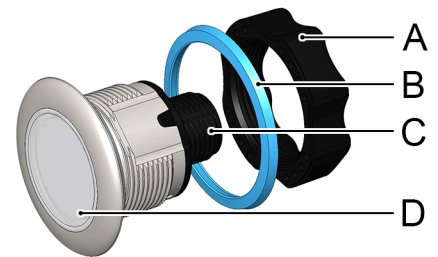

In case of temporary contact (cleaning), series10 is resistant to:

- Mineral acids, including in high concentrations
- A number of organic acids (e.g. carbonic acid, lactic acid, oleic acid, and citric acid)
- Oxidation and reducing agents
- Neutral and acidic salt solutions
- Saturated aliphatic and cycloaliphatic hydrocarbons
- Alcohols, with the exception of methyl alcohol

Assembly

- Assemble the SENSORswitch on a sloped surface of at least 3°.
- Clean the mounting surface and seal before assembly.
- The SENSORswitch must be readily accessible for cleaning and be spaced at least 6 mm away from other components.
- Tighten the lock nuts with max. 1.5 Nm.

Cleaning

- Clean the switch with it installed.
- Chemicals, temperatures, and water pressure must not damage or destroy the materials.
- Do not use abrasive aids for cleaning.